


Climate Control, Comfort Climatronic , (9AQ)

From January 2011

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Fresh Air Blower Control Module, Climatronic Control Module, A/C Clutch

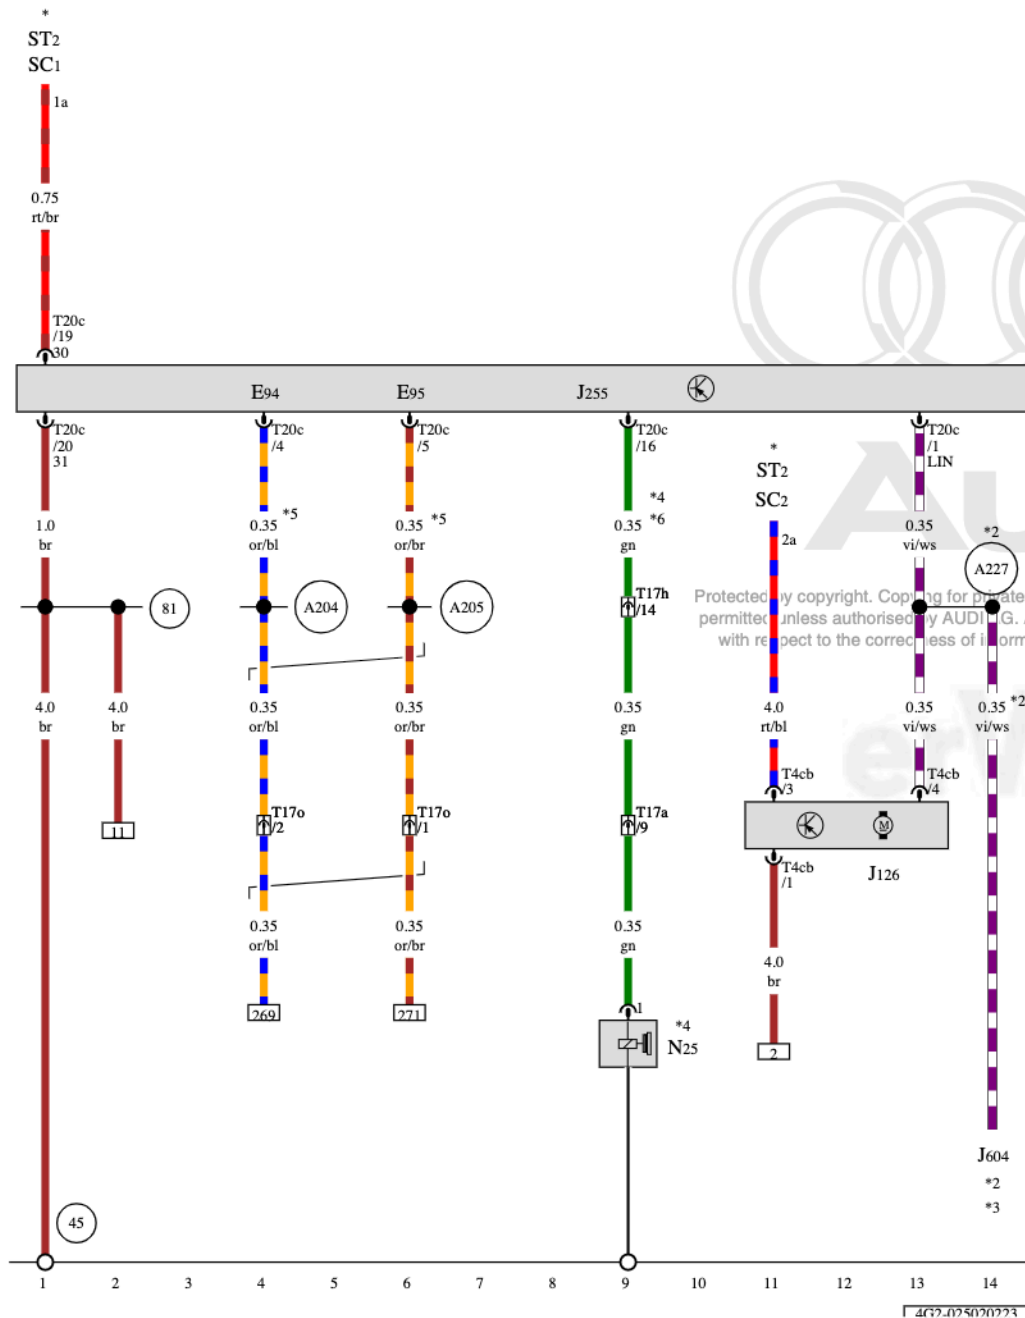

- E94 Heated Driver Seat Adjuster
- E95 Heated Front Passenger Seat Adjuster
- J126 Fresh Air Blower Control Module
- J255 Climatronic Control Module
- J604 Auxiliary Heater Control Module
- N25 A/C Clutch
- SC1 Fuse 1 (On Fuse Panel C)
- SC2 Fuse 2 (On Fuse Panel C)
- ST2 Fuse Panel 2
- T4cb 4-Pin Connector
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, White
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station, Red
- T17o 17-Pin Connector, In the Connector Station, Right A-Pillar
- T20c 20-Pin Connector


- 45 Ground Connection Behind Instrument Panel, Center
- 81 Ground Connection 1 (in Instrument Panel Wiring Harness)
- A204 Instrument Cluster CAN Bus High Connection (in Instrument Panel Wiring Harness)
- A205 Instrument Cluster CAN Bus Low Connection (in Instrument Panel Wiring Harness)
- A227 LIN Bus Connection 2 (in Instrument Panel Wiring Harness)

- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 For Vehicles with Hybrid Drive
- *3 Refer to Applicable Engine Wiring Diagram
- *4 Depending on Equipment
- *5 Data Bus Wire (CAN Bus)
- *6 From September 2013

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Climatronic Control Module, Coolant Shut-Off Valve,
Cooling Circuit Solenoid Valve, Coolant Recirculation
Pump

J255	Climatronic Control Module
N82	Coolant Shut-Off Valve
N492	Cooling Circuit Solenoid Valve
T2qh	2-Pin Connector
T2t	2-Pin Connector
T3at	3-Pin Connector
T4fo	4-Pin Connector, In the Engine/Motor Compartment, Left
T17g	17-Pin Connector, In the Connector Station, Right A-Pillar
T17i	17-Pin Connector, In the Left A-Pillar Connector Station
T17z	17-Pin Connector, Left Plenum Chamber E-Box Connector Station
T20c	20-Pin Connector
V50	Coolant Recirculation Pump
*	For Vehicles Without Parking Heater
*2	For Vehicles with Hybrid Drive
*3	For LHD Vehicles
*4	For RHD Vehicles

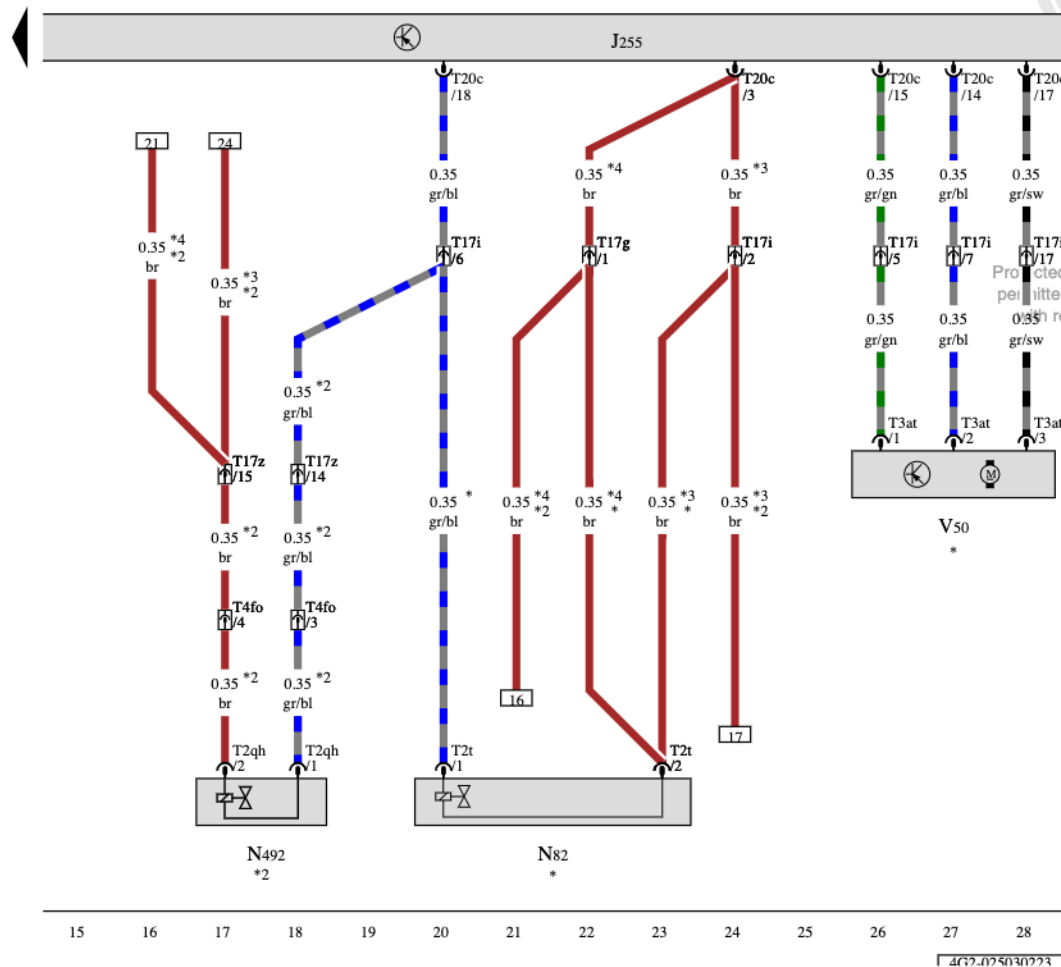


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Position Sensor in Left Center Vent, Position Sensor in Left Side Vent, Climatronic Control Module

- G626 Position Sensor in Left Center Vent
- G627 Position Sensor in Right Center Vent
- G628 Position Sensor in Left Side Vent
- J255 Climatronic Control Module
- L67 Left Instrument Panel Vent Illumination Bulb
- L68 Center Instrument Panel Vent Illumination Bulb
- T8w 8-Pin Connector
- T8y 8-Pin Connector
- T16f 16-Pin Connector

- 45 Ground Connection Behind Instrument Panel, Center
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)
- 354 Ground Connection 6 (in Instrument Panel Wiring Harness)
- A58 5 Volt Connection (in Instrument Cluster Wiring Harness)
- A175 Connection 58s (in Instrument Panel Wiring Harness)

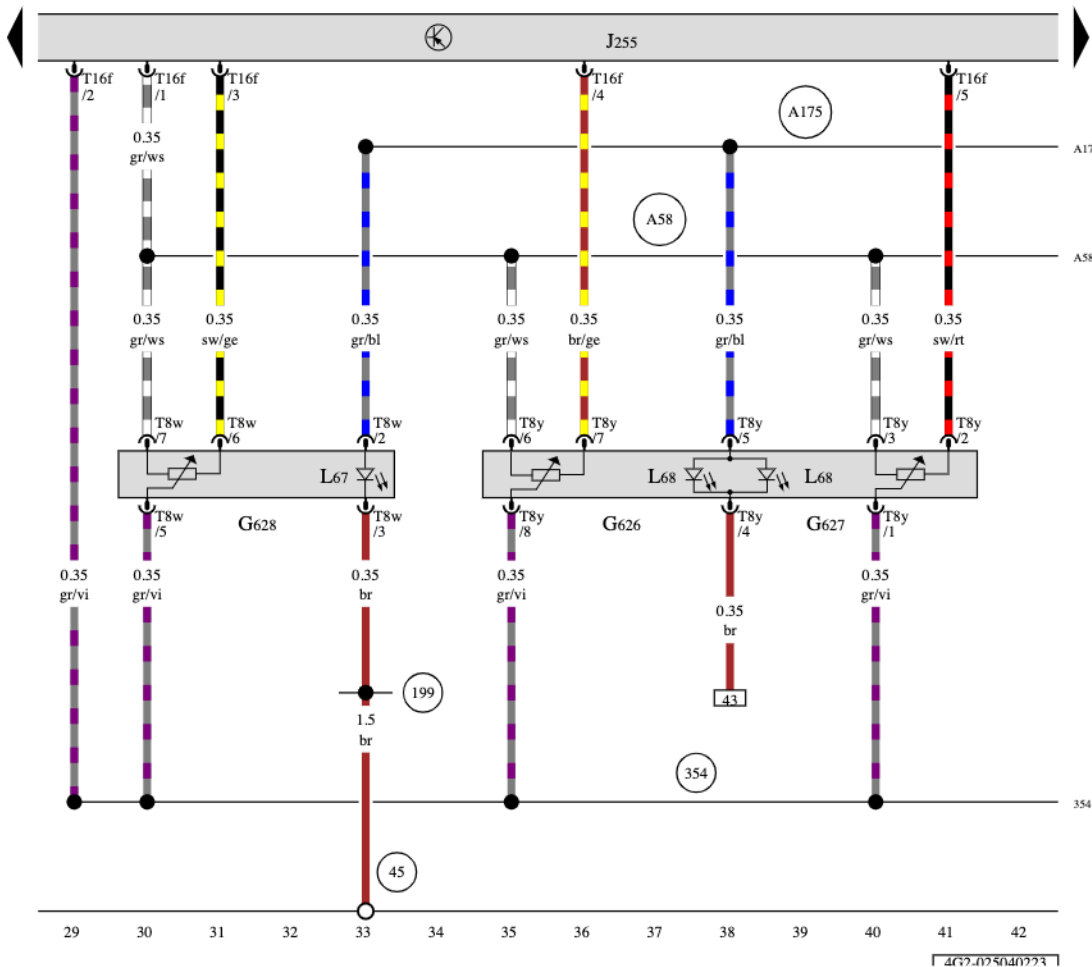


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Sunlight Photo Sensor, Position Sensor in Right Side Vent, Climatronic Control Module

- G107 Sunlight Photo Sensor
- G629 Position Sensor in Right Side Vent
- J255 Climatronic Control Module
- L69 Right Instrument Panel Vent Illumination Bulb
- T4al 4-Pin Connector
- T8z 8-Pin Connector
- T16f 16-Pin Connector
- T20c 20-Pin Connector

- 45 Ground Connection Behind Instrument Panel, Center
- 213 Ground Connection (in Instrument Panel Wiring Harness)
- 354 Ground Connection 6 (in Instrument Panel Wiring Harness)
- A58 5 Volt Connection (in Instrument Cluster Wiring Harness)
- A67 A/C System Connection (31) (in Instrument Panel Wiring Harness)
- A175 Connection 58s (in Instrument Panel Wiring Harness)

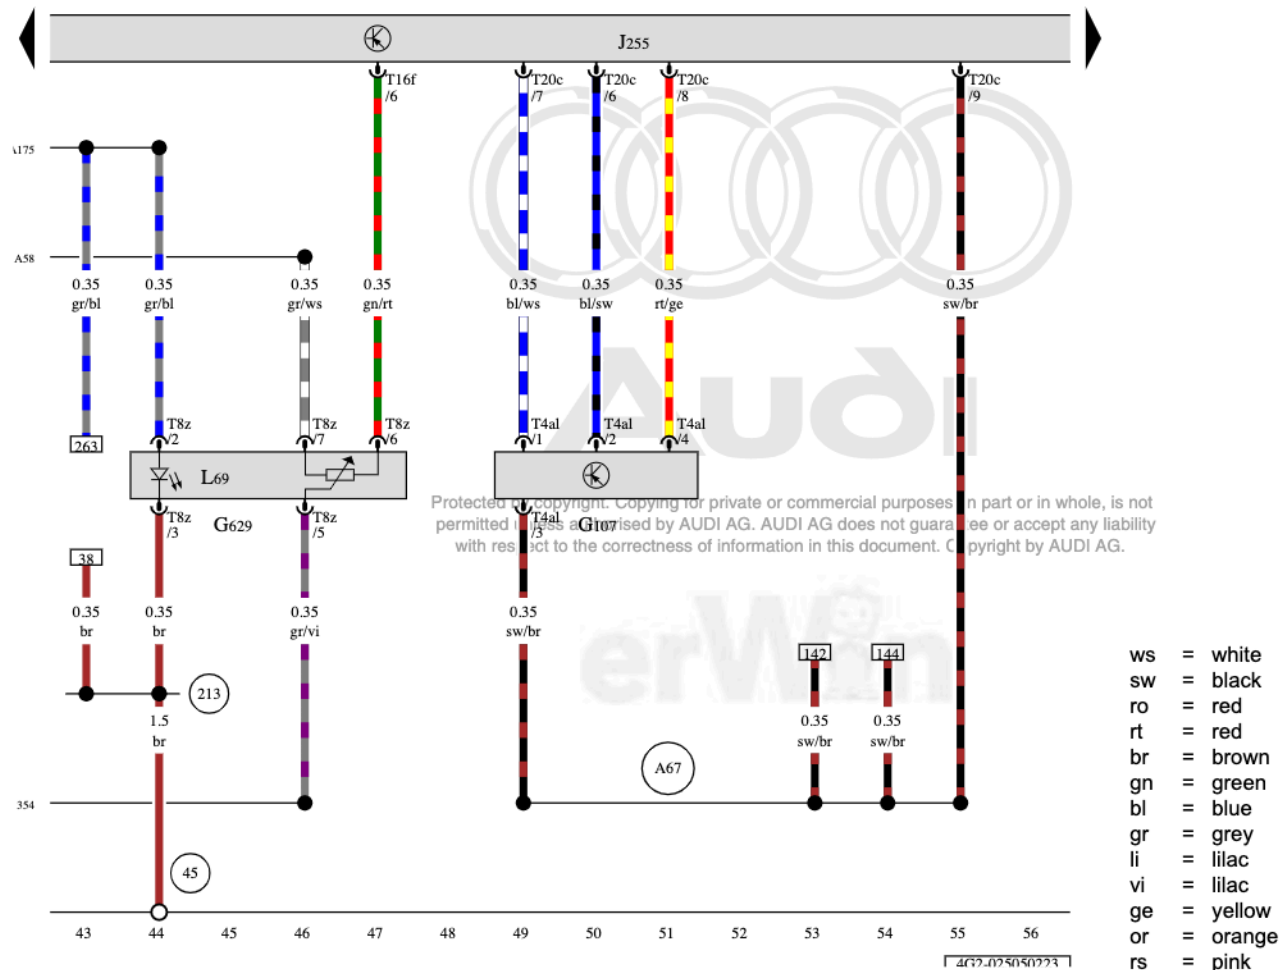

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability

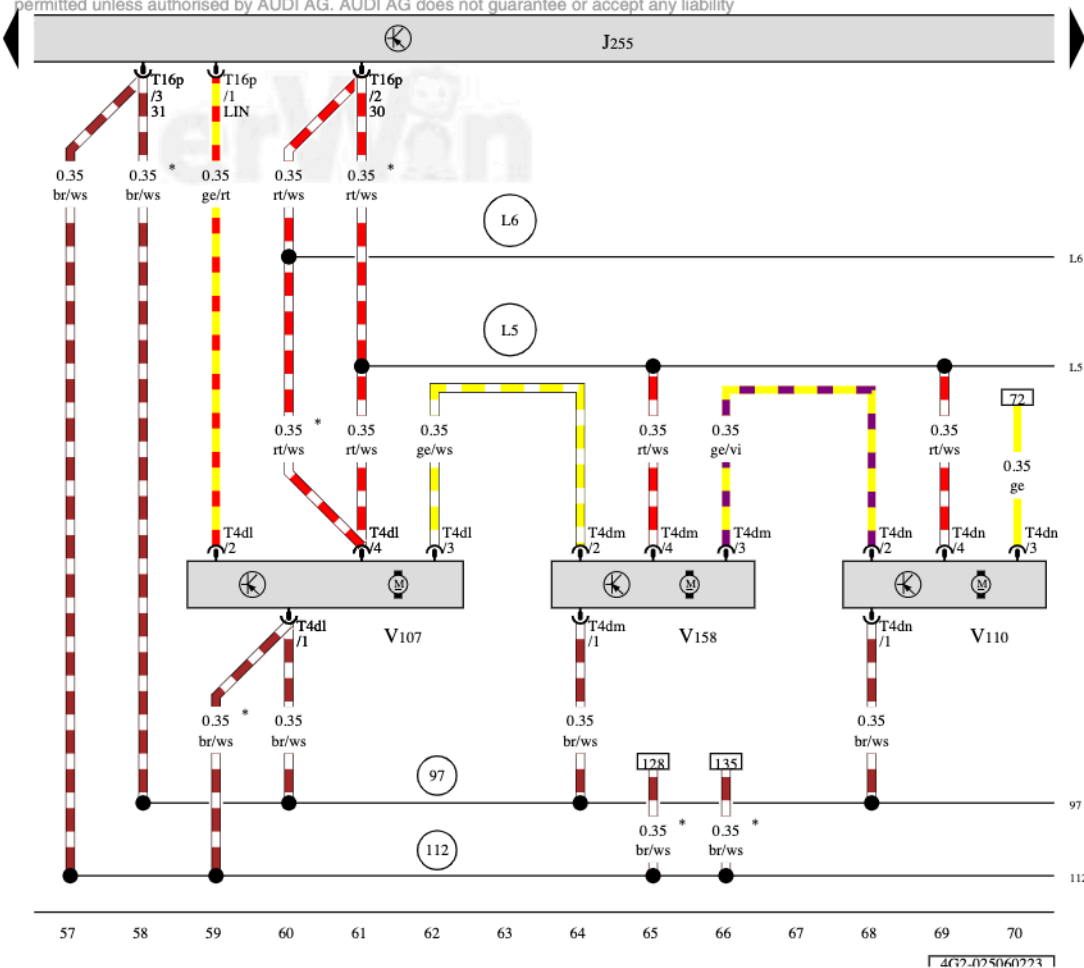

Climatronic Control Module, Defroster Door Motor, Left Center Vent Motor, Left Temperature Control Door Motor

- J255 Climatronic Control Module
- T4dl 4-Pin Connector
- T4dm 4-Pin Connector
- T4dn 4-Pin Connector
- T16p 16-Pin Connector
- V107 Defroster Door Motor
- V110 Left Center Vent Motor
- V158 Left Temperature Control Door Motor

- 97 Ground Connection 1 (in A/C Wiring Harness)
- 112 Ground Connection 2 (in A/C Wiring Harness)
- L5 Connection 1 (in A/C Unit Wiring Harness)
- L6 Connection 2 (in A/C Unit Wiring Harness)

* For RHD Vehicles


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Climatronic Control Module, Left Footwell Door Motor, Left Side Vent Adjustment Motor, Left Rear Temperature Control Door Motor

- J255 Climatronic Control Module
- T4do 4-Pin Connector
- T4dw 4-Pin Connector
- T4dx 4-Pin Connector
- V108 Left Footwell Door Motor
- V299 Left Side Vent Adjustment Motor
- V313 Left Rear Temperature Control Door Motor

- 97 Ground Connection 1 (in A/C Wiring Harness)
- 112 Ground Connection 2 (in A/C Wiring Harness)
- L5 Connection 1 (in A/C Unit Wiring Harness)
- L6 Connection 2 (in A/C Unit Wiring Harness)

* For RHD Vehicles

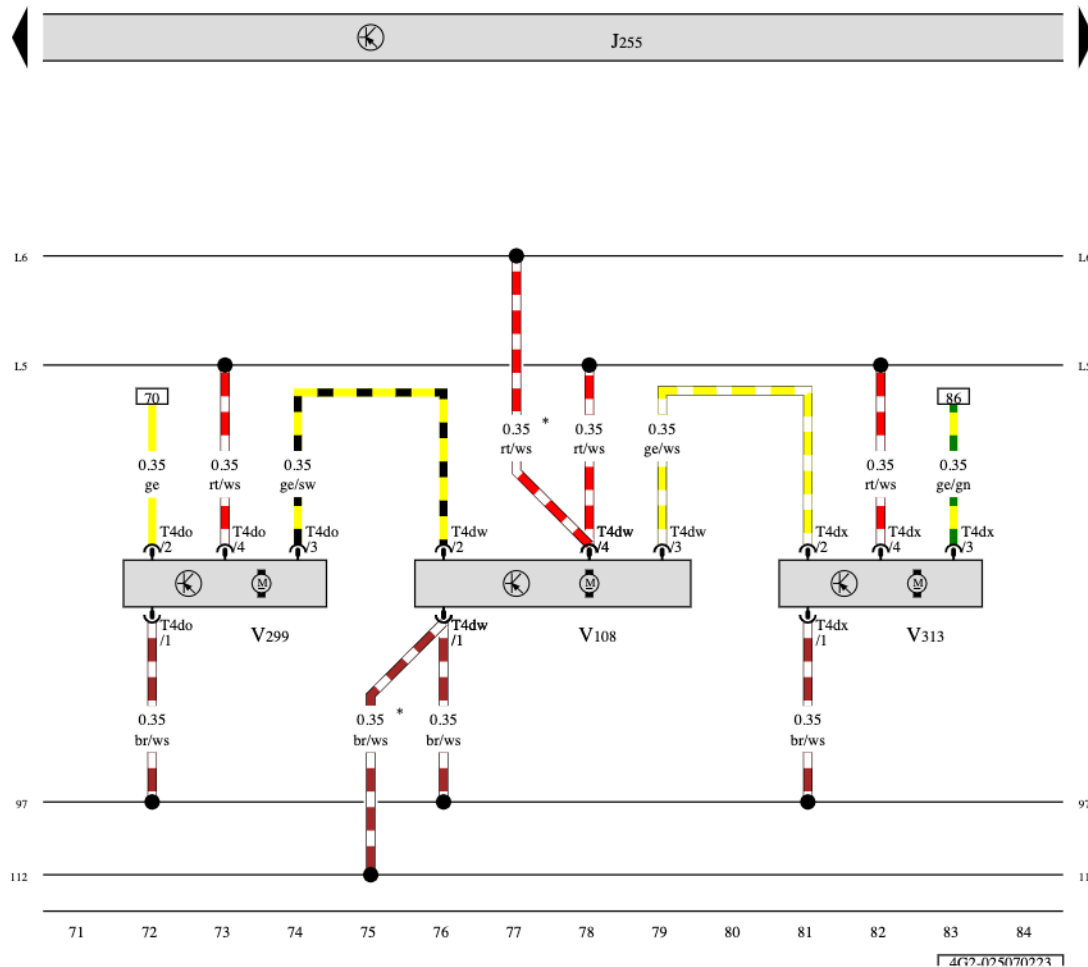

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Climatronic Control Module, Left Rear Air Door Motor,
Right Rear Air Door Motor

J255 Climatronic Control Module

T4dy 4-Pin Connector

T4dz 4-Pin Connector

V239 Left Rear Air Door Motor

V240 Right Rear Air Door Motor

(97) Ground Connection 1 (in A/C Wiring Harness)

(112) Ground Connection 2 (in A/C Wiring Harness)


(188) Ground Connection 3 (in A/C Wiring Harness)

L5 Connection 1 (in A/C Unit Wiring Harness)

(L6) Connection 2 (in A/C Unit Wiring Harness)

L7 Connection 3 (in A/C Unit Wiring Harness)

* For RHD Vehicles

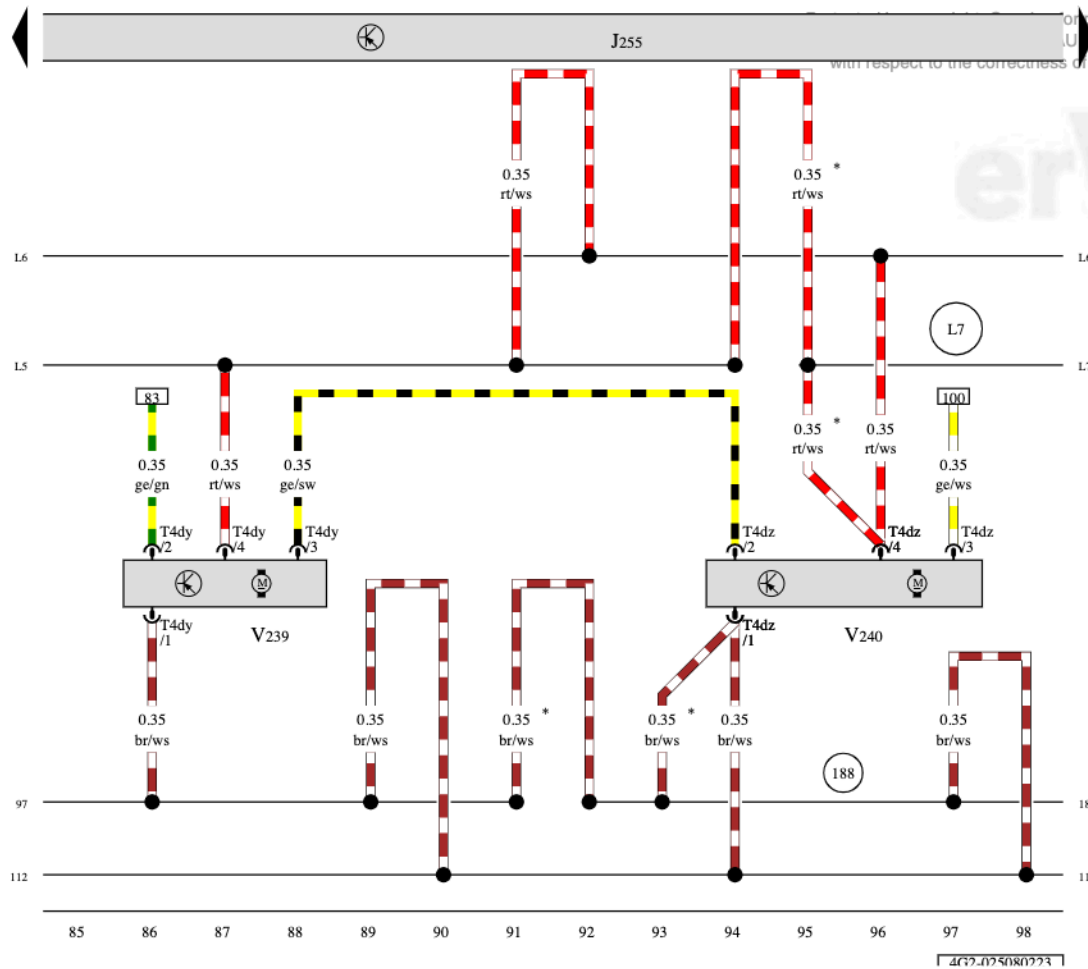


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Climatronic Control Module, Right Side Vent Adjustment Motor

- J255 Climatronic Control Module
- T4dq 4-Pin Connector
- T4ea 4-Pin Connector
- T4eb 4-Pin Connector
- V109 Right Footwell Door Motor
- V300 Right Side Vent Adjustment Motor
- V314 Right Rear Temperature Control Door Motor
- 112 Ground Connection 2 (in A/C Wiring Harness)
- 188 Ground Connection 3 (in A/C Wiring Harness)
- L6 Connection 2 (in A/C Unit Wiring Harness)
- L7 Connection 3 (in A/C Unit Wiring Harness)

* For RHD Vehicles
Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

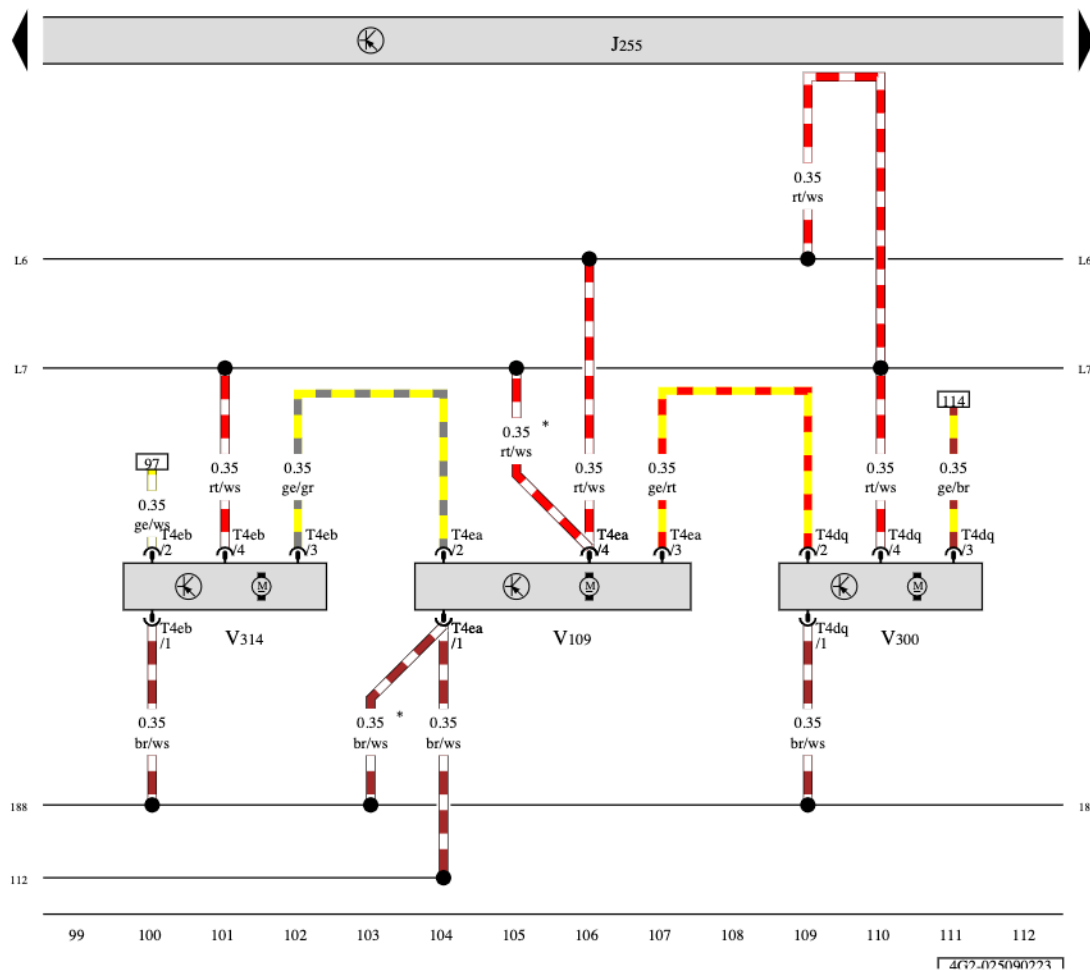


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Climatronic Control Module, Right Center Vent Motor, Right Temperature Control Door Motor, Indirect Ventilation Door Motor

- J255 Climatronic Control Module
- T4dr 4-Pin Connector
- T4ds 4-Pin Connector
- T4ec 4-Pin Connector
- V111 Right Center Vent Motor
- V159 Right Temperature Control Door Motor
- V213 Indirect Ventilation Door Motor

- 188 Ground Connection 3 (in A/C Wiring Harness)
- 243 Ground Connection 1 (in Climatronic Wiring Harness)
- L6 Connection 2 (in A/C Unit Wiring Harness)
- L7 Connection 3 (in A/C Unit Wiring Harness)

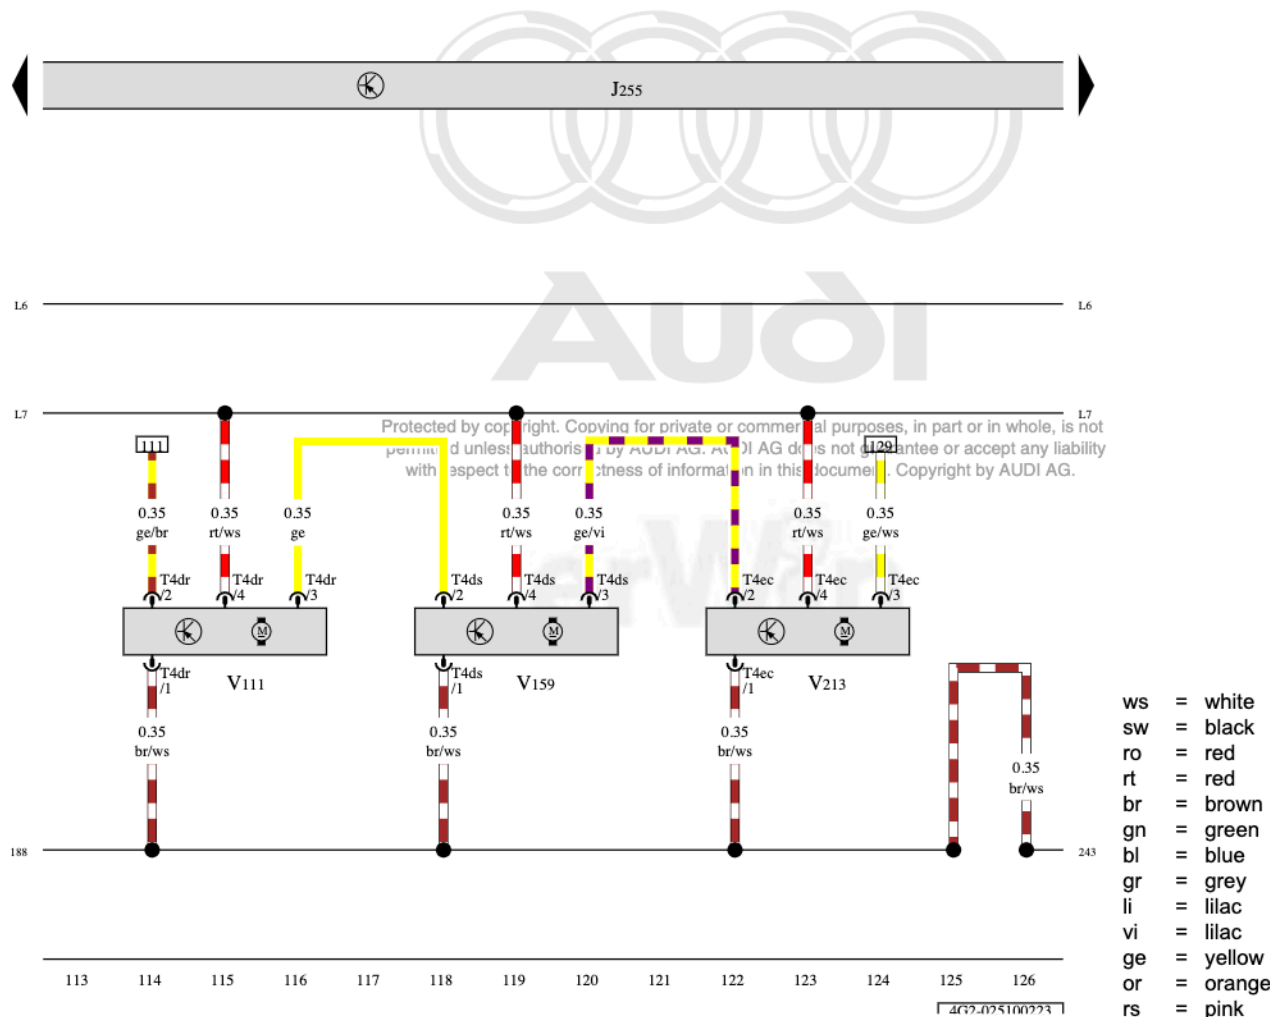

Climatronic Control Module, Back Pressure Door Motor, Recirculation Door Motor

J255 Climatronic Control Module
T4dt 4-Pin Connector
T4du 4-Pin Connector
V71 Back Pressure Door Motor
V113 Recirculation Door Motor


243 Ground Connection 1 (in Climatronic Wiring Harness)

L6 Connection 2 (in A/C Unit Wiring Harness)

L7 Connection 3 (in A/C Unit Wiring Harness)

L8 Connection 4 (in A/C Unit Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted. For RHD Vehicles. AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

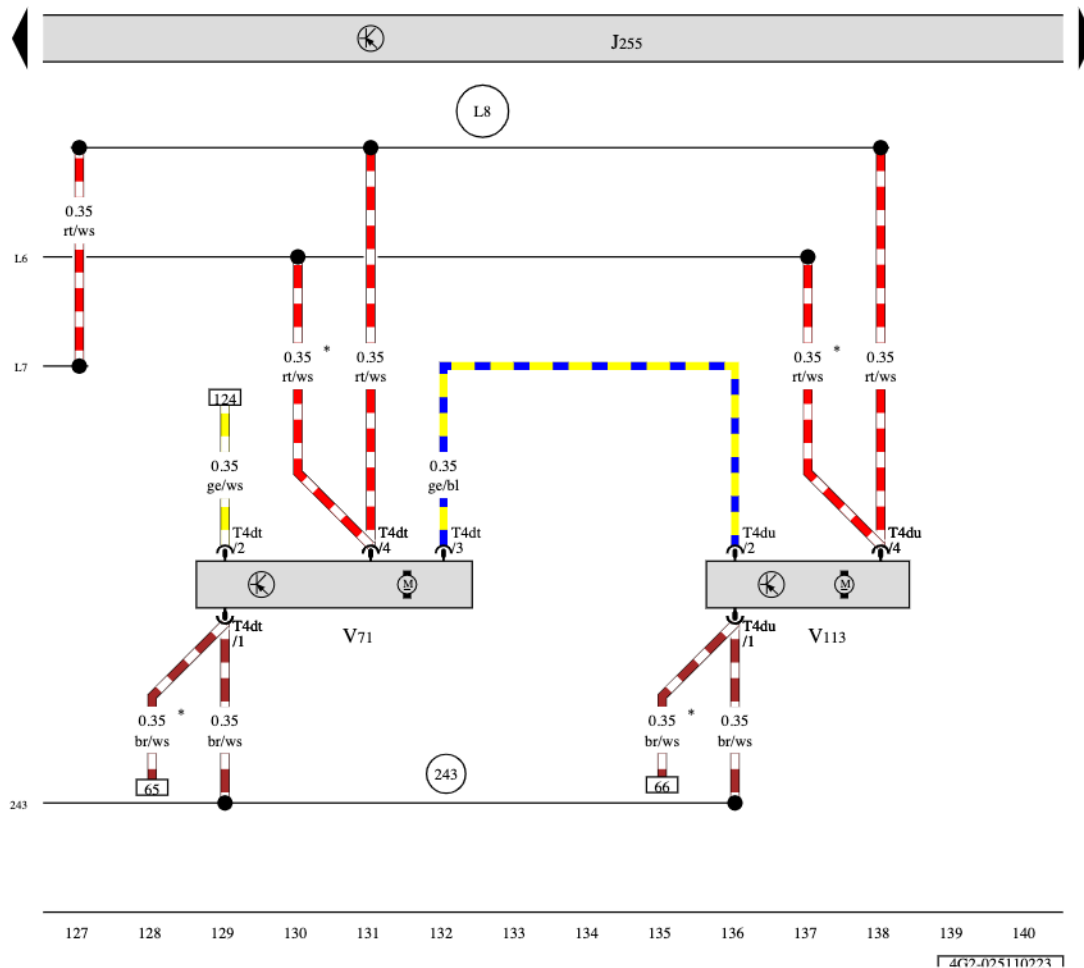


ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Left Vent Temperature Sensor, Left Footwell Vent Temperature Sensor, Evaporator Vent Temperature Sensor, Climatronic Control Module

- G150 Left Vent Temperature Sensor
- G151 Right Vent Temperature Sensor
- G261 Left Footwell Vent Temperature Sensor
- G262 Right Footwell Vent Temperature Sensor
- G263 Evaporator Vent Temperature Sensor
- J255 Climatronic Control Module
- T2it 2-Pin Connector
- T2iu 2-Pin Connector
- T2kl 2-Pin Connector
- T2km 2-Pin Connector
- T2kn 2-Pin Connector
- T16p 16-Pin Connector
- T20c 20-Pin Connector

244 Sensor Ground Connection (in Climatronic Wiring Harness)

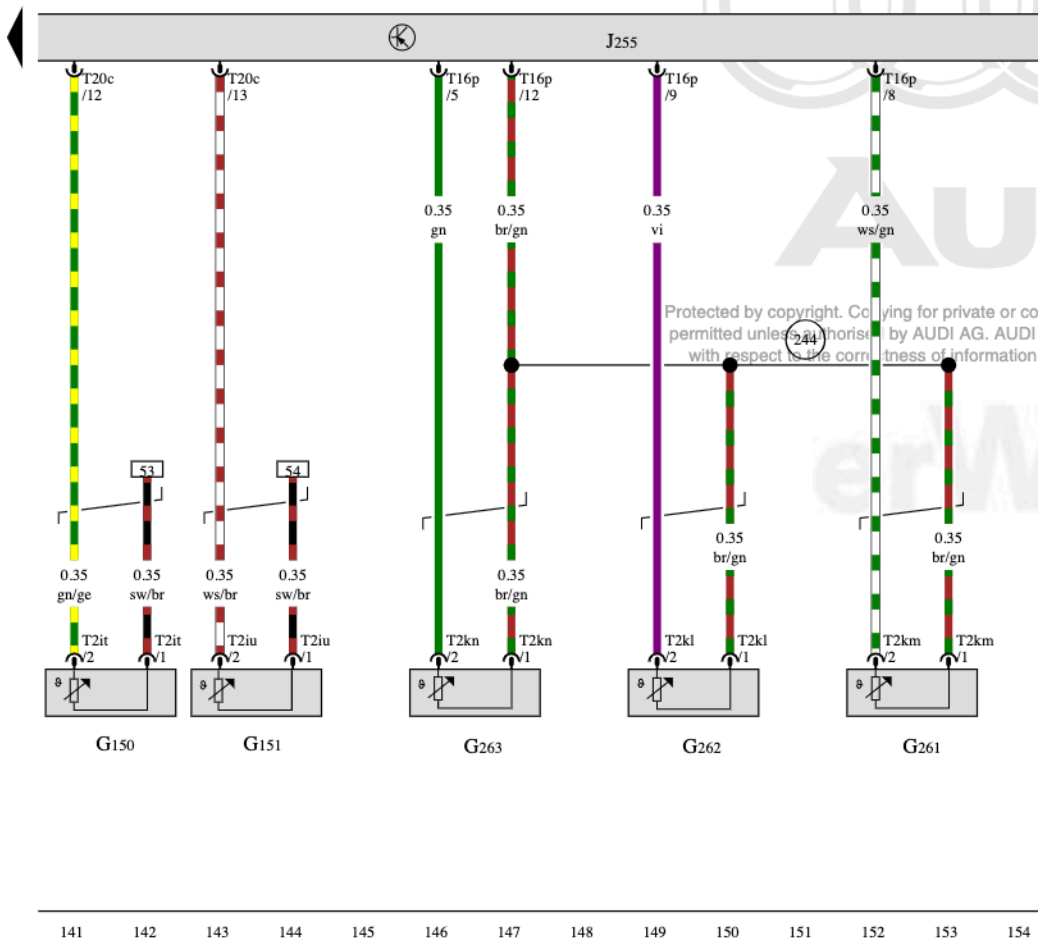

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Rear A/C Display Control Head

E265 Rear A/C Display Control Head
SB2 Fuse 2 (On Fuse Panel B)
ST2 Fuse Panel 2
T20a 20-Pin Connector

44 Ground Connection on A-Pillar, Lower Left

366 Ground Connection 1 (in Main Wiring Harness)


* Refer to Applicable Wiring Diagram for Fuse Positions

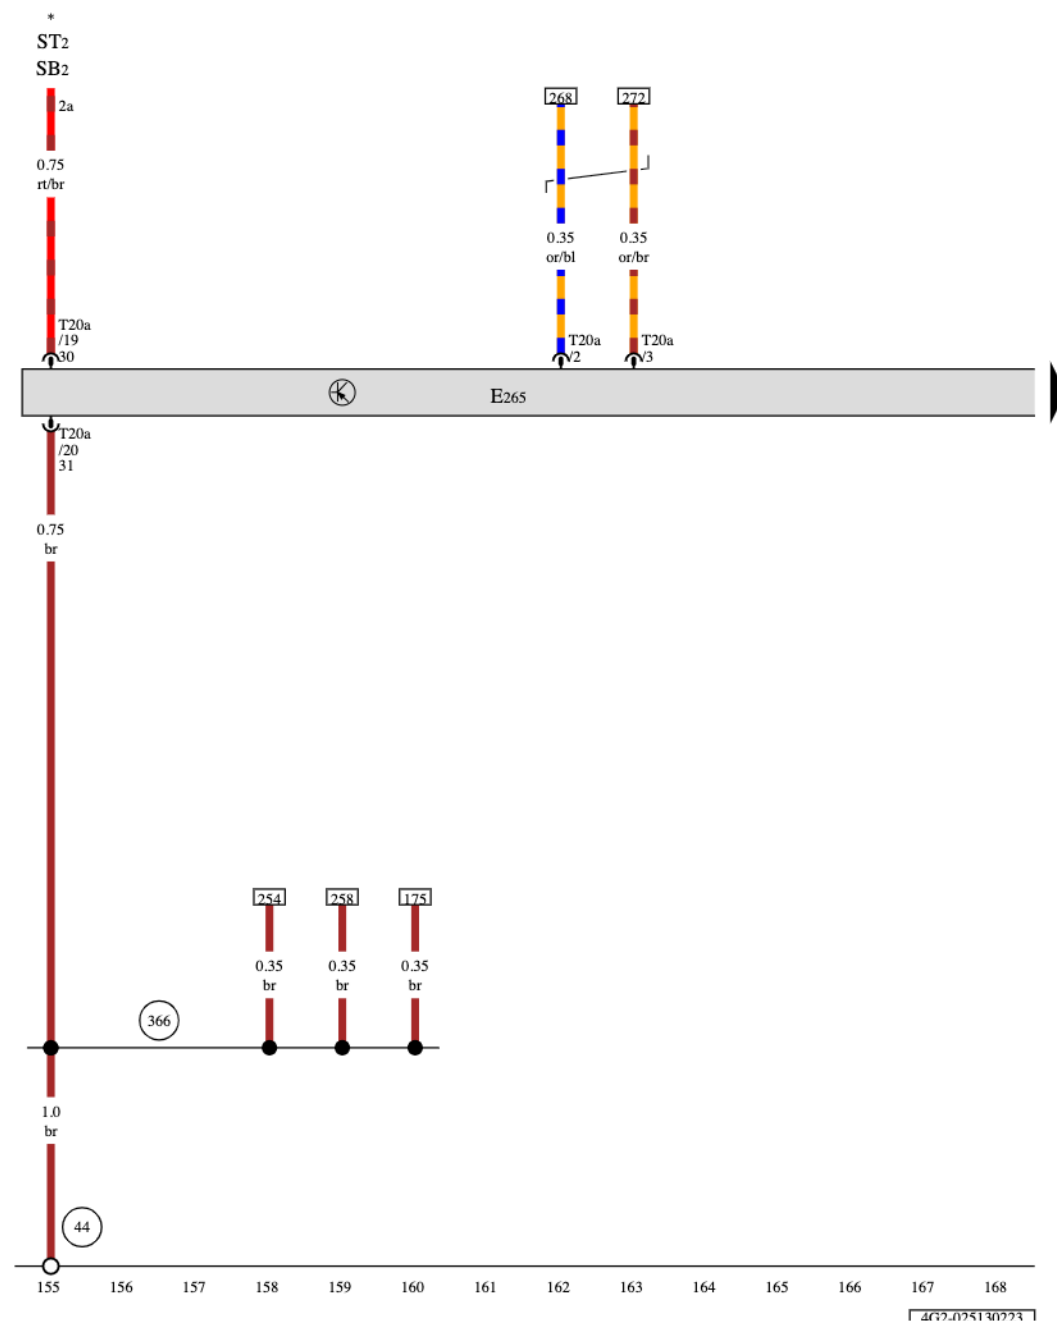

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

*2
ST1
SB1
1a
1.0
sw/vi
169

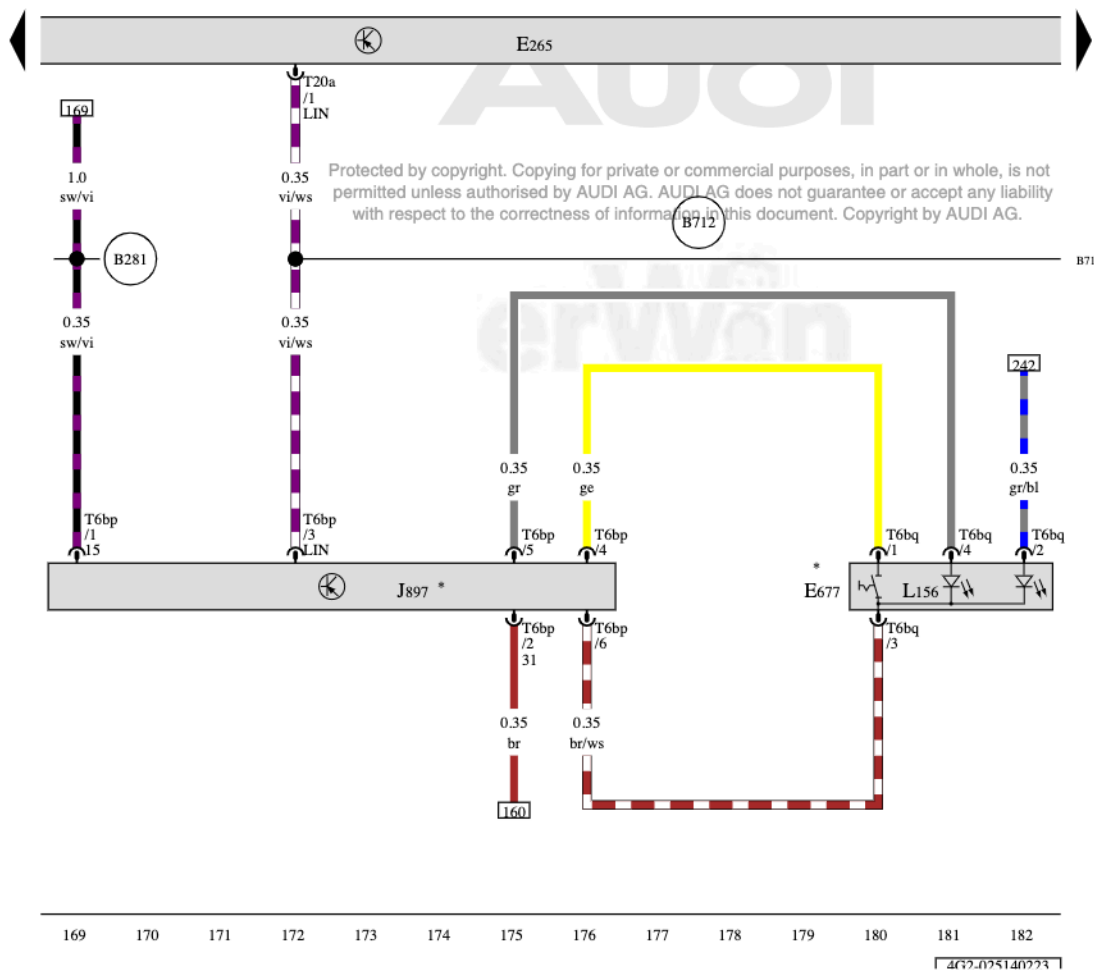

Rear A/C Display Control Head, Ionizer Button, Ionizer Control Module

- E265 Rear A/C Display Control Head
- E677 Ionizer Button, On the Right B-Pillar
- J897 Ionizer Control Module
- L156 Switch Illumination Bulb
- SB1 Fuse 1 (On Fuse Panel B)
- ST1 Fuse Panel 1
- T6bp 6-Pin Connector
- T6bq 6-Pin Connector
- T20a 20-Pin Connector

(B281) Positive Connection 5 (15a) (in Main Wiring Harness)

(B712) LIN Bus Connection 7 (in Main Wiring Harness)

* For Vehicles with China Equipment

*2 Refer to Applicable Wiring Diagram for Fuse Positions

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink




Rear A/C Display Control Head, Left Rear Upper Body Vent Adjustment Motor, Right Rear Upper Body Vent Adjustment Motor

- E265 Rear A/C Display Control Head
- T4cc 4-Pin Connector
- T4cd 4-Pin Connector
- T20a 20-Pin Connector
- V315 Left Rear Upper Body Vent Adjustment Motor
- V316 Right Rear Upper Body Vent Adjustment Motor

- 391 Ground Connection 26 (in Main Wiring Harness)
- B476 Connection 12 (in Main Wiring Harness)
- B712 LIN Bus Connection 7 (in Main Wiring Harness)


* For Vehicles with China Equipment

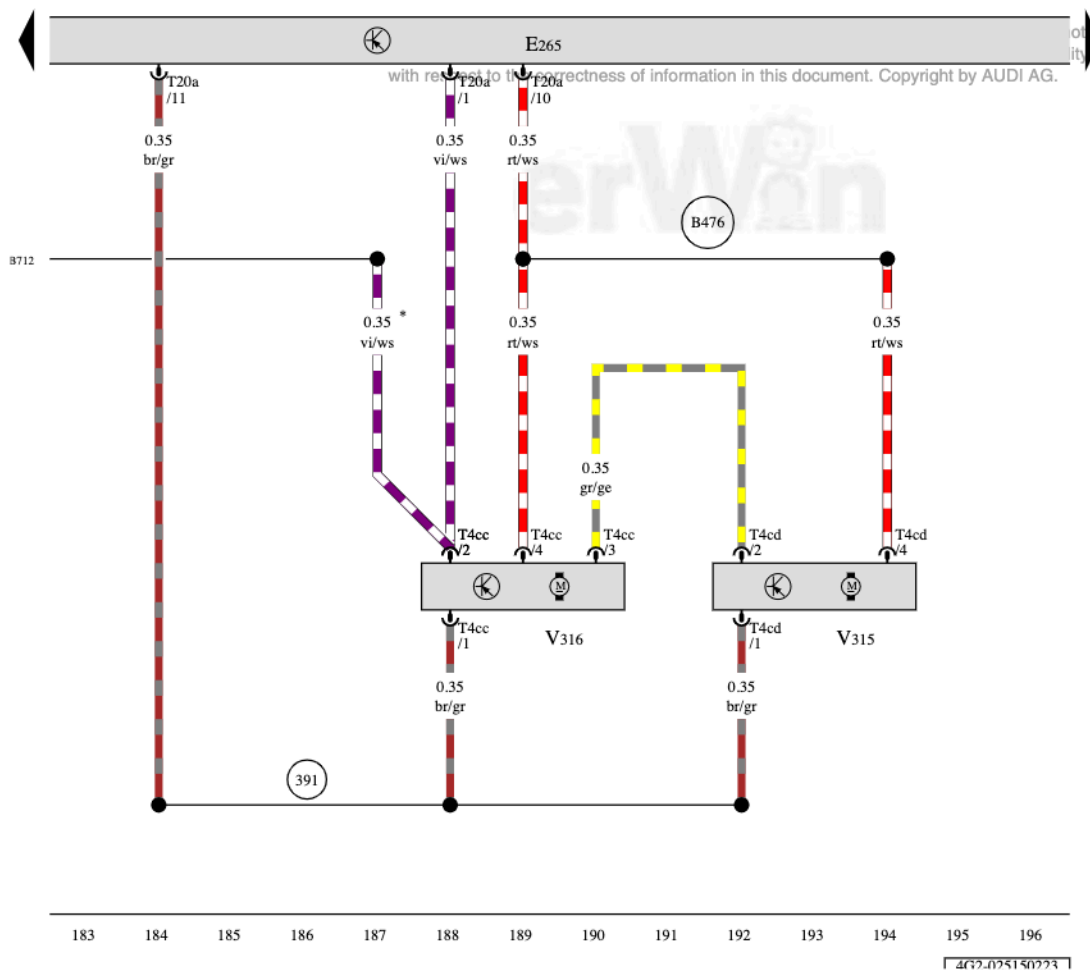

Rear A/C Display Control Head, Position Sensor in Left Rear Upper Body Vent, Position Sensor in Right Rear Upper Body Vent

- E265 Rear A/C Display Control Head
- G630 Position Sensor in Left Rear Upper Body Vent
- G631 Position Sensor in Right Rear Upper Body Vent
- T8v 8-Pin Connector
- T20a 20-Pin Connector

B474 Connection 10 (in Main Wiring Harness)

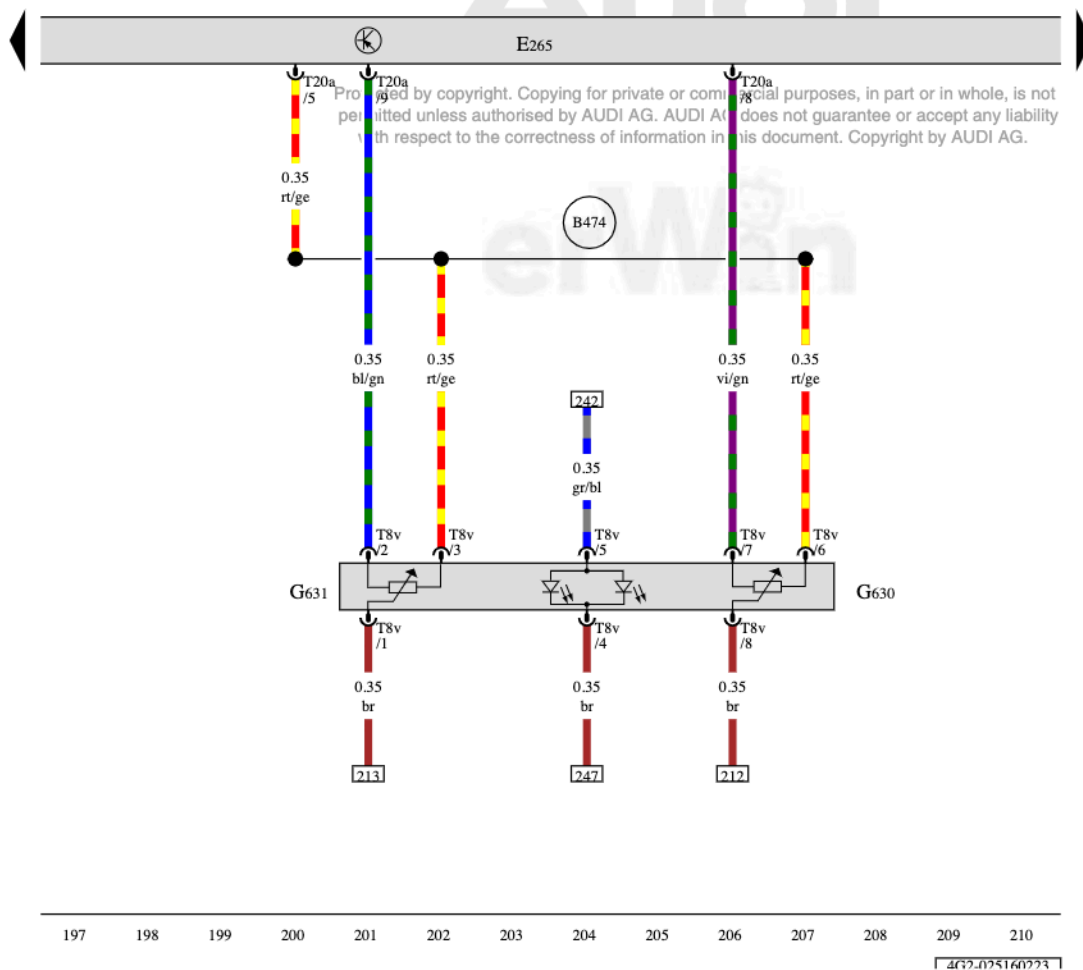


Rear A/C Display Control Head, Left Rear Upper Body Vent Temperature Sensor, Left Rear Footwell Vent Temperature Sensor


- E265 Rear A/C Display Control Head
- G635 Left Rear Upper Body Vent Temperature Sensor
- G636 Right Rear Upper Body Vent Temperature Sensor
- G637 Left Rear Footwell Vent Temperature Sensor
- G638 Right Rear Footwell Vent Temperature Sensor
- T2an 2-Pin Connector
- T2ix 2-Pin Connector
- T2iy 2-Pin Connector
- T2iz 2-Pin Connector
- T20a 20-Pin Connector

392 Ground Connection 27 (in Main Wiring Harness)

394 Ground Connection 29 (in Main Wiring Harness)

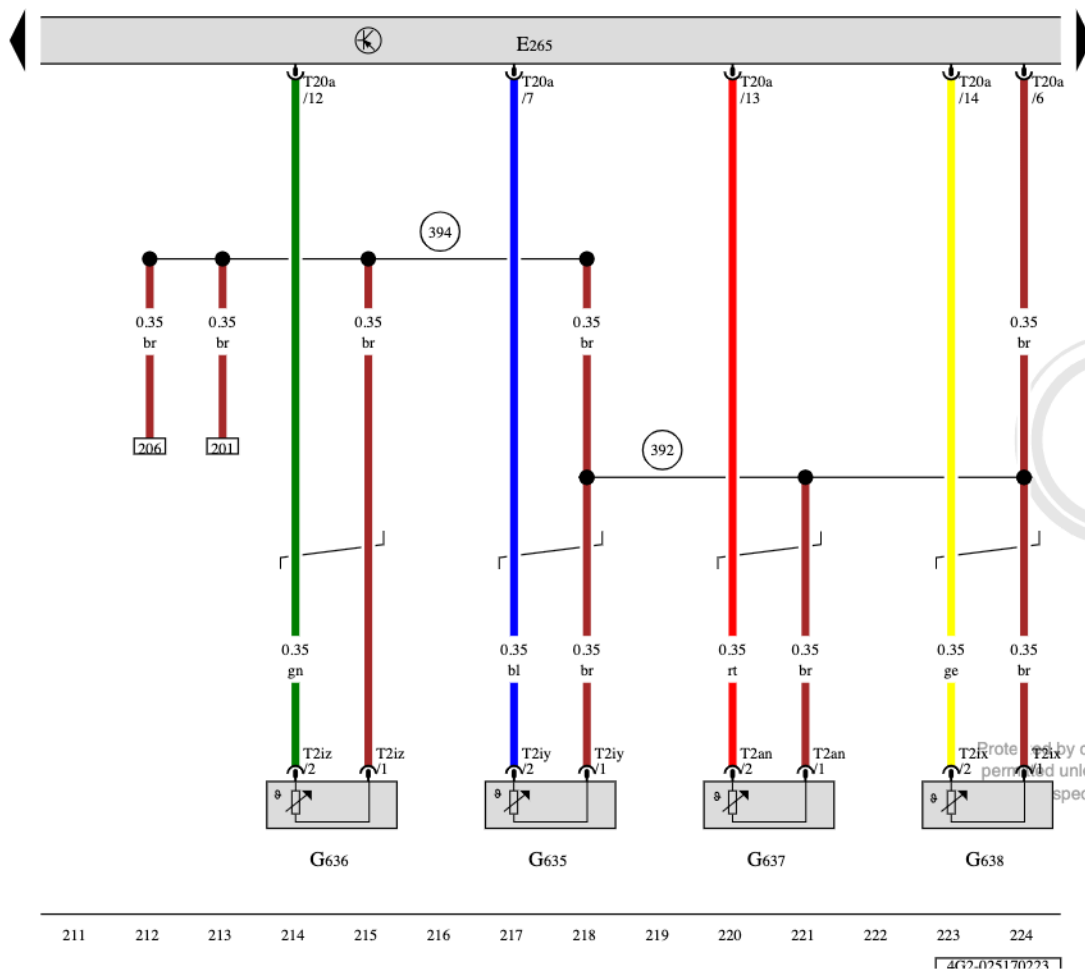

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

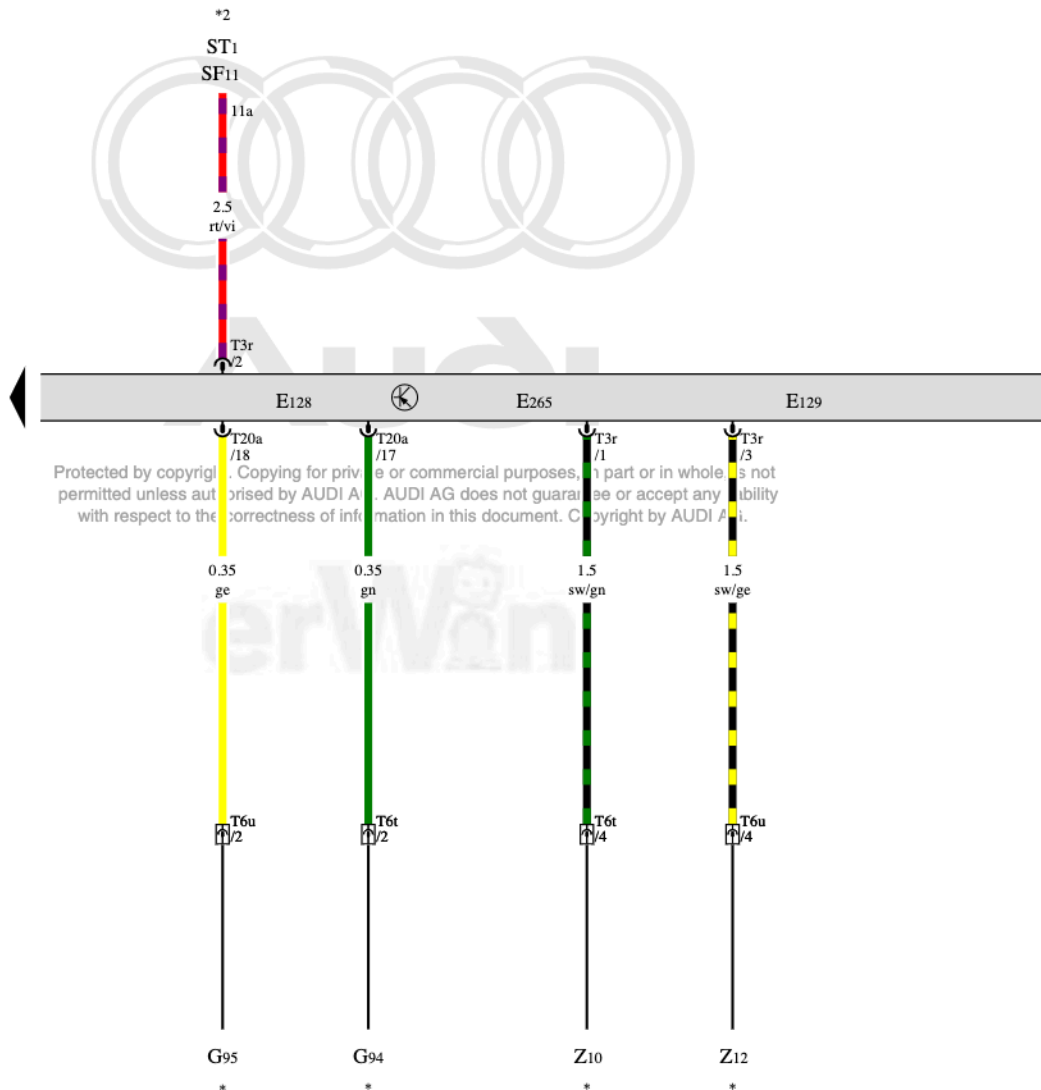


Left Rear Heated Seat Regulating Switch, Right Rear Heated Seat Regulating Switch, Rear A/C Display Control Head

- E128 Left Rear Heated Seat Regulating Switch
- E129 Right Rear Heated Seat Regulating Switch
- E265 Rear A/C Display Control Head
- G94 Left Rear Heated Seat Temperature Sensor
- G95 Right Rear Heated Seat Temperature Sensor
- ST1 Fuse Panel 1
- SF11 Fuse 11 (On Fuse Panel F)
- T3r 3-Pin Connector
- T6t 6-Pin Connector, In the Coupling Point for the Left Rear Seat
- T6u 6-Pin Connector, In the Coupling Point for the Right Rear Seat
- T20a 20-Pin Connector
- Z10 Left Rear Bench Seat Heating Element
- Z12 Right Rear Bench Seat Heating Element
- * Refer to the Applicable Heated Seats Wiring Diagram
- *2 Refer to Applicable Wiring Diagram for Fuse Positions

Left Rear Air Vent Illumination Bulb, Right Rear Air Vent Illumination Bulb

- L88 Left Rear Air Vent Illumination Bulb
- L89 Right Rear Air Vent Illumination Bulb
- T2iv 2-Pin Connector
- T2iw 2-Pin Connector

- 373 Ground Connection 8 (in Main Wiring Harness)
- 687 Ground Connection 1 on Center Tunnel
- B731 Connection 58s (in Main Wiring Harness) 1
- B732 Connection 58s (in Main Wiring Harness) 2

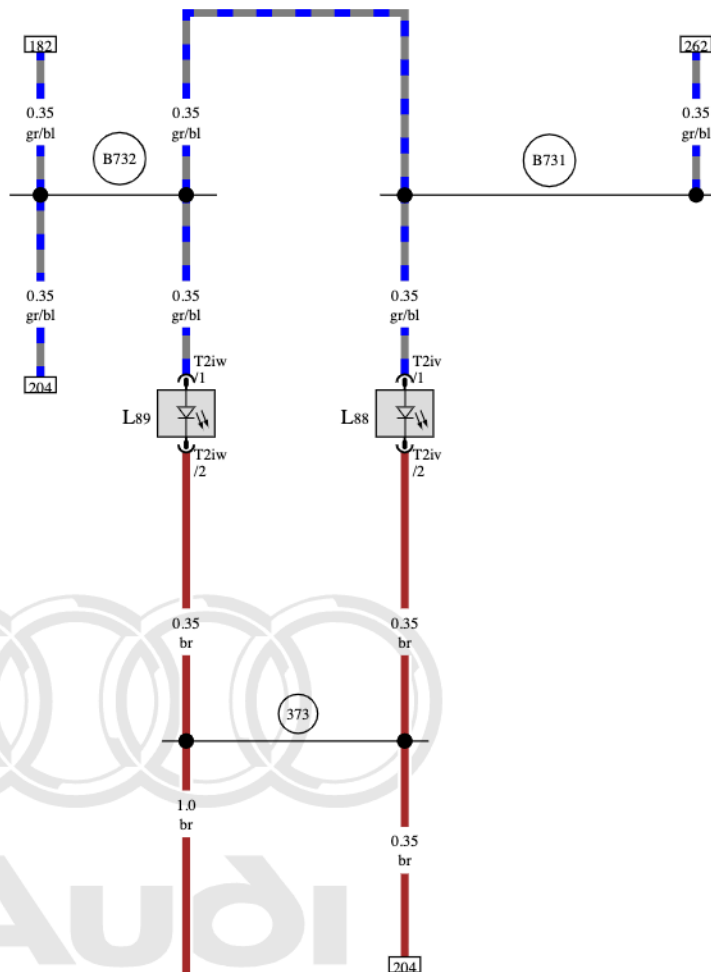


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

239 240 241 242 243 244 245 246 247 248 249 250 251 252

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100

Air Quality Sensor, A/C Pressure/Temperature Sensor, Humidity Sensor in Fresh Air Intake Duct, Vehicle Electrical System Control Module, A/C Compressor Regulator Valve

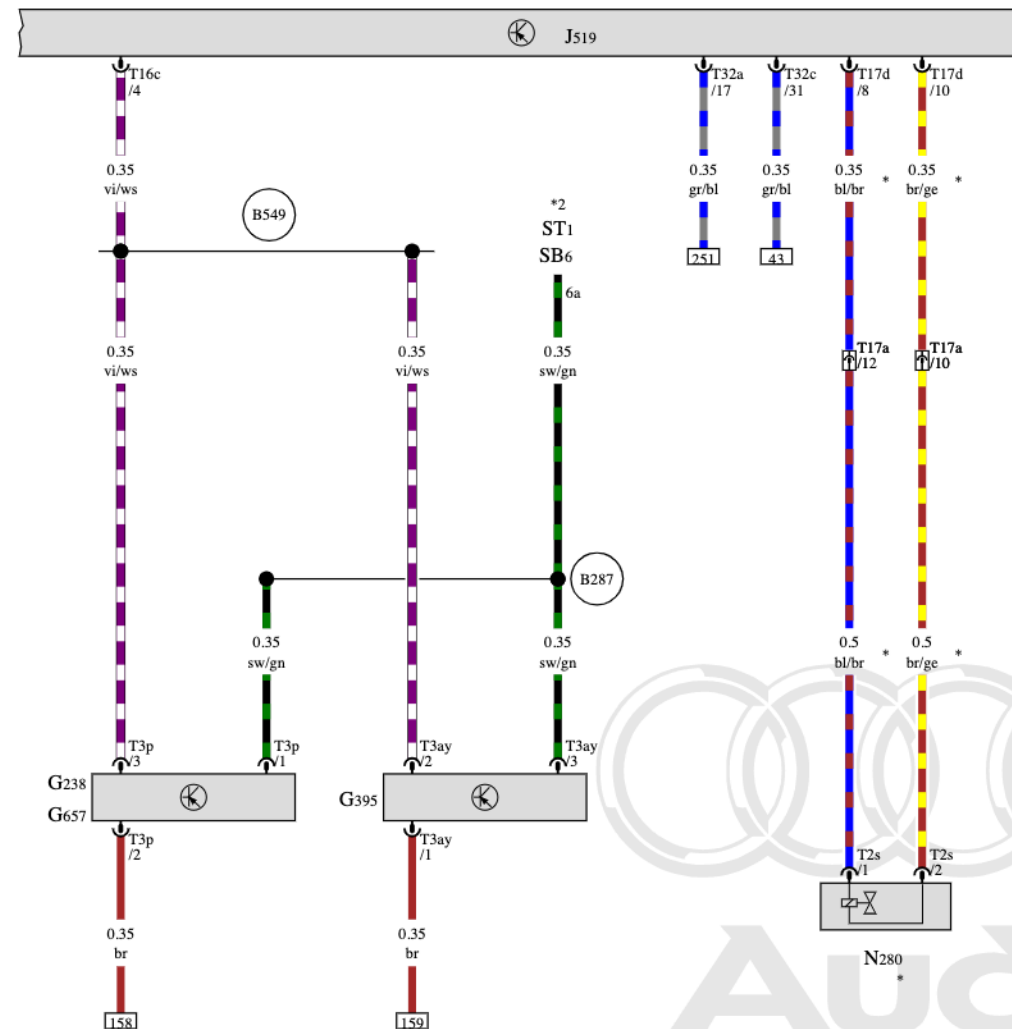

- G238 Air Quality Sensor
- G395 A/C Pressure/Temperature Sensor
- G657 Humidity Sensor in Fresh Air Intake Duct
- J519 Vehicle Electrical System Control Module
- N280 A/C Compressor Regulator Valve
- ST1 Fuse Panel 1
- SB6 Fuse 6 (On Fuse Panel B)
- T2s 2-Pin Connector
- T3ay 3-Pin Connector
- T3p 3-Pin Connector
- T16c 16-Pin Connector
- T17a 17-Pin Connector, Left Plenum Chamber E-Box Connector Station, White
- T17d 17-Pin Connector
- T32a 32-Pin Connector
- T32c 32-Pin Connector

B287 Positive Connection 11 (15a) (in Main Wiring Harness)

B549 LIN Bus Connection 2 (in Main Wiring Harness)


- * For Vehicles Without Hybrid Drive
- *2 Refer to Applicable Wiring Diagram for Fuse Positions

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in full, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Data Bus on Board Diagnostic Interface, Instrument Cluster CAN Bus High Wire Junction 2

- J533 Data Bus on Board Diagnostic Interface
- T32b 32-Pin Connector
- T46b 46-Pin Connector
- TV81 Instrument Cluster CAN Bus High Wire Junction 2, On the Relay and Fuse Panel in the Luggage Compartment, Right
- TV84 Instrument Cluster CAN Bus Low Wire Junction 2
- B708 Instrument Cluster CAN Bus High Connection 1 (in Main Wiring Harness)
- B709 Instrument Cluster CAN Bus Low Connection 1 (in Main Wiring Harness)

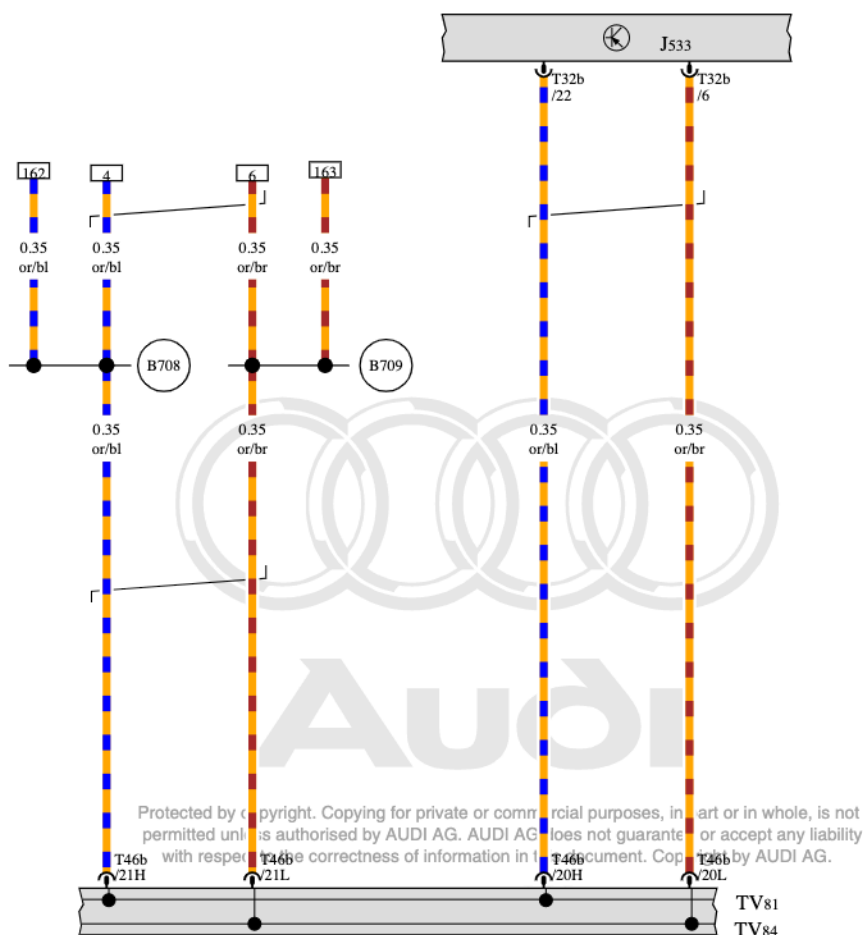

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink